


VIII Menu Function

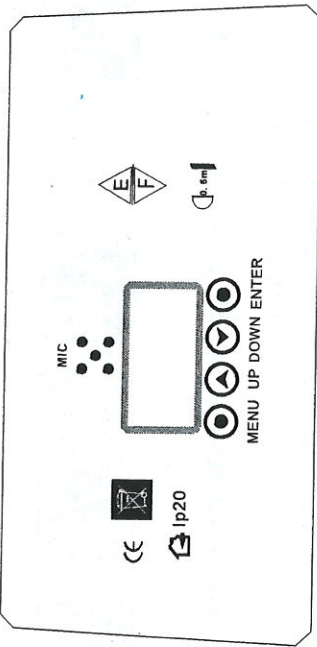

Main Menu	Secondary Menu	Explain
Addr	A001	DMX512 Address
CH--	Ch7--ch13	DMX512 Channel
run-	Run1	Auto run1
	Run2	Auto run2
	Run3	Auto run3
	Run4	Auto run4
	Run5	Auto run5
	Run6	Auto run6
	Run7	Auto run7
	Run8	Sound control
Test	Xtor	Test X motor
	Ytor	Test Y motor
	rotA	Test Z motor
	PAAt	Test gobo motor
	Colo	Test color motor
	Stro	Test strobe motor
	Xinu	X motor reverse
	Yinu	Y motor reverse
Corr	Xto-	X motor revise
	Yto-	Y motor revise
	PAA-	Gobo motor revise
	Col-	Color motor revise
ligh	-on- -- -off	Lamp on or off when reset
	rest	Motor reset
or--	orig	Load the default set when leave factory
Ue--	Uer5	version

IX Channels Control

7 CHANNEL

Channel	Value	Control function	
1	0-255	Pan	
2	0-255	Tilt	
3	0-127	Rotate (80 to)	
	128-190	rotate deasil from fast to slow	
	191-255	rotate widdershins from slow to fast	
4	0	white	
	6-11	Gobo1	
	12-17	Gobo2	
	18-23	Gobo3	
	24-29	Gobo4	
	30-35	Gobo5	
	36-41	Gobo6	
	42-47	Gobo7	
	48-53	Gobo8	
	54-59	Gobo9	
	60-65	Gobo10	
	66-71	Gobo11	
	72-77	Gobo12	
	78-83	Gobo13	
	84-89	Gobo14	
	90-130	Gobe rotate deasil from fast to slow	
	131-170	Gobe rotate deasil from slow to fast	
171-175	Gobo1 shaking from slow to fast		
176-180	Gobo2 shaking from slow to fast		
181-186	Gobo3 shaking from slow to fast		
187-192	Gobo4 shaking from slow to fast		
193-197	Gobo5 shaking from slow to fast		
198-203	Gobo6 shaking from slow to fast		
204-209	Gobo7 shaking from slow to fast		
210-214	Gobo8 shaking from slow to fast		
215-220	Gobo9 shaking from slow to fast		
221-226	Gobo10 shaking from slow to fast		
227-231	Gobo11 shaking from slow to fast		
232-237	Gobo12 shaking from slow to fast		
238-243	Gobo13 shaking from slow to fast		
244-248	Gobo14 shaking from slow to fast		
249-255	Gobe rotate deasil from slow to fast		
5	0-4	white 5-9 half color1	
	10-14	color1 15-18 half color2	
	19-23	color2 24-28 half color3	
	29-33	color3 34-37 half color4	
	38-42	color4 43-46 half color5	
	47-51	color5 52-56 half color6	
	57-61	color6 62-65 half color7	
	67-70	color7 71-75 half color8	
	76-79	color8 80-84 half color9	
	85-89	color9 90-93 half color10	
	94-98	color10 99-103 half color11	
	104-108	color11 109-112 half color12	
	113-117	color12 118-122 half color13	
	127	white 128-190 strobe open	
	191-255	stroke close	
	6	0-10	stroke open
		11-39	stroke from slow to fast
40-245		stroke open	
246-255		stroke from slow to fast	
0-255		Total dimmer	
0-255		Pan fine (16 bit)	
0-255		Tilt fine (16 bit)	
7	0-20	no macro function	
	21-70	Auto run1	
	71-120	Auto run2	
	121-170	Auto run3	
8	171-220	Auto run4	
	221-255	Sound control	
	0-10	macro speed	
9	0-10	no function	
	11-100	lamp on	
10	101-200	lamp off	
	201-255	system reset	

13 CHANNEL

Channel	Value	Control function	
1	0-255	Pan	
2	0-255	Tilt	
3	0-127	Rotate (80 to)	
	128-190	rotate deasil from fast to slow	
	191-255	rotate widdershins from slow to fast	
4	0	white	
	6-11	Gobo1	
	12-17	Gobo2	
	18-23	Gobo3	
	24-29	Gobo4	
	30-35	Gobo5	
	36-41	Gobo6	
	42-47	Gobo7	
	48-53	Gobo8	
	54-59	Gobo9	
	60-65	Gobo10	
	66-71	Gobo11	
	72-77	Gobo12	
	78-83	Gobo13	
	84-89	Gobo14	
	90-130	Gobe rotate deasil from fast to slow	
	131-170	Gobe rotate deasil from slow to fast	
171-175	Gobo1 shaking from slow to fast		
176-180	Gobo2 shaking from slow to fast		
181-186	Gobo3 shaking from slow to fast		
187-192	Gobo4 shaking from slow to fast		
193-197	Gobo5 shaking from slow to fast		
198-203	Gobo6 shaking from slow to fast		
204-209	Gobo7 shaking from slow to fast		
210-214	Gobo8 shaking from slow to fast		
215-220	Gobo9 shaking from slow to fast		
221-226	Gobo10 shaking from slow to fast		
227-231	Gobo11 shaking from slow to fast		
232-237	Gobo12 shaking from slow to fast		
238-243	Gobo13 shaking from slow to fast		
244-248	Gobo14 shaking from slow to fast		
249-255	Gobe rotate deasil from slow to fast		
5	0-4	white 5-9 half color1	
	10-14	color1 15-18 half color2	
	19-23	color2 24-28 half color3	
	29-33	color3 34-37 half color4	
	38-42	color4 43-46 half color5	
	47-51	color5 52-56 half color6	
	57-61	color6 62-65 half color7	
	67-70	color7 71-75 half color8	
	76-79	color8 80-84 half color9	
	85-89	color9 90-93 half color10	
	94-98	color10 99-103 half color11	
	104-108	color11 109-112 half color12	
	113-117	color12 118-122 half color13	
	127	white 128-190 strobe open	
	191-255	stroke close	
	6	0-10	stroke open
		11-39	stroke from slow to fast
40-245		stroke open	
246-255		stroke from slow to fast	
0-255		Total dimmer	
0-255		Pan fine (16 bit)	
0-255		Tilt fine (16 bit)	
7	0-20	no macro function	
	21-70	Auto run1	
	71-120	Auto run2	
	121-170	Auto run3	
8	171-220	Auto run4	
	221-255	Sound control	
	0-10	macro speed	
9	0-10	no function	
	11-100	lamp on	
10	101-200	lamp off	
	201-255	system reset	