


* Mounting: Hanging up or fixing on the ground

***Function code setting**

1.The function can be set at the control panel

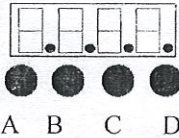

A: MENU: to choose the function
 B and C: UP and DOWN: to set the figure of function
 D: ENTER: to confirm the data position

2.Display function

- 1 d001 001- 512 DMX512-8CH mode
- 2 A001 001- 512 DMX512-4CH mode
- 3 FH99 01 - 99 Strobe from slow to fast.
- 4 r255 000 - 255 Red dimmer from faint to bright
- 5 G255 000 - 255 Green dimmer from faint to bright
- 6 B255 000 - 255 Blue dimmer from faint to bright
- 7 CL01 01 - 08 8 kinds of color output
- 8 CC99 01 - 99 Jump change from slow to fast
- 9 DE99 01 - 99 Gradual change from slow to fast
- 10 CP99 01 - 99 Pulse change from slow to fast
- 11 SU01 01 - 09 Auto mode: 1-8 strobe change, 9 jump change

DMX channel

Channel	Value	Function
CH1	0--255	Whole dimmer
CH2	0--255	Red dimmer
CH3	0--255	Green dimmer
CH4	0--255	Blue dimmer
CH5	1-255	Strobe from slow to fast
CH6	Auto mode	0—50: DMX dimmer; 51—100: Color mode (8type); 101—150: Jump change; 151—200: Gradual change; 201—250 Pulse change; 251-255: Sound
CH7	Auto speed	From slow to fast (Color mode to set color)