



serial number	instruction	instruction
Channel 1	X	Adjustment is turned up during 0-255, down regulate inversion.
Channel 2	X fine-tuning	Adjustment is turned up during 0-255, down regulate
Channel 3	Y	Adjustment is turned up during 0-255, down regulate inversion.
Channel 4	Y fine-tuning	Adjustment is turned up during 0-255, down regulate inversion.
Channel 5	X,Y The motor speed	0-255 Slow up, 0 The fastest speed
Channel 6	Built-in program	0-240 has 8 modes of self walking, 255 is sound control
Channel 7	Sound sensitivity adjustment	Sound sensitivity adjustment
Channel 8	Rest	0-255 REST