

DMX Channel Chart :

| CH MODE | 1               | 2               | 3      | 4                     | 5                  | 6                 | 7                   | 8     | 9     | 10  | 11          | 12   | 13           | 14                   | 15    | 16              | 17               | 18             | 19                          | 20           |
|---------|-----------------|-----------------|--------|-----------------------|--------------------|-------------------|---------------------|-------|-------|-----|-------------|------|--------------|----------------------|-------|-----------------|------------------|----------------|-----------------------------|--------------|
| 16CH    | COLOUR<br>WHEEL | STOP/<br>STROBE | DIMMER | STATIC GOBO<br>CHANGE | PRISM<br>INSERTION | PRISM<br>ROTATION | EFFECTS<br>MOVEMENT | FROST | FOCUS | PAN | PAN<br>FINE | TILT | TILT<br>FINE | FUNCTION<br>(UNUSED) | RESET | LAMP<br>CONTROL |                  |                |                             |              |
| 20CH    |                 |                 |        |                       |                    |                   |                     |       |       |     |             |      |              |                      |       |                 | PAN-TILT<br>TIME | COLOUR<br>TIME | DIMMER-PRISM-<br>FROST TIME | GOBO<br>TIME |