
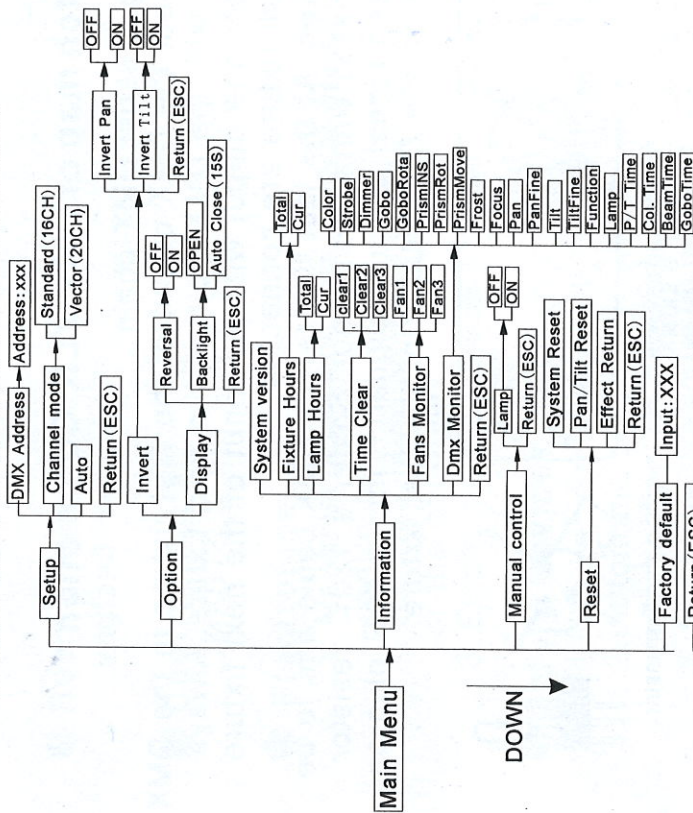


VIII Menu Function

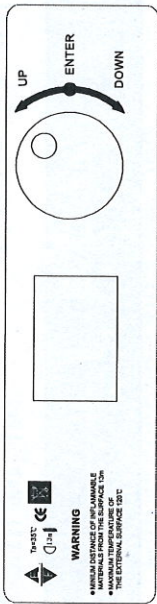

CHANNEL	STANDARD	CHANNEL MODE	VECTOR
1	COLOUR WHEEL	COLOUR WHEEL	
2	STOP/STROBE	STOP/STROBE	
3	DIMMER	DIMMER	
4	STATIC GOGO CHANGE	STATIC GOGO CHANGE	
5	PRISM INSERTION	PRISM INSERTION	
6	PRISM ROTATION	PRISM ROTATION	
7	EFFECTS MOVEMENT	EFFECTS MOVEMENT	
8	FROST	FROST	
9	FOCUS	FOCUS	
10	PAN	PAN	
11	PAN FINE	PAN FINE	
12	TILT	TILT	
13	TILT FILE	TILT FILE	
14	FUNCTION	FUNCTION	
15	RESET	RESET	
16	LAMP CONTROL (with Option: Lamp Dmx ON)	LAMP CONTROL (with Option: Lamp Dmx ON)	
17		PAN-TILT TIME	
18		COLOUR TIME	
19		BEAM TIME	
20		GOGO TIME	

IX Stand 16 Channels Control

Ch1: COLOUR WHEEL	000-004: white
	005-127: select single color and half color
	128-255: Color wheel rotate (slow-fast)
	000-003: Closed
	004-103: Strobe (slow-fast)
	104-107: Open
	108-207: Pulsation (slow-fast)
Ch2: STOP/STROBE	208-212: Open
	213-225: Random slow strobe
	226-238: Random medium strobe
	239-251: Random fast strobe
	252-255: Open
Ch3: DIMMER	000-255: dimmer
	000-003: White
	004-71: select static gobo
Ch4: STATIC GOGO CHANGE	72-113: Gobo wheel rotate deasil (fast-slow)
	114-117: stop.
	118-159: Gobo wheel rotate anticlockwisely (slow-fast)
	160-255: gobo shake
Ch5: PRISM INSERTION	000-127: no function
	128-255: turn on the prism
	000: no function
Ch6: PRISM ROTATION	001-127: manual control the angle of prism
	128-190: prism rotate anticlockwisely (Fast-slow)
	191-192: stop
	193-255: prism rotate deasil (slow-fast)
Ch7	No Function
Ch8: FROST	000-255
Ch9: FOCUS	000-255
Ch10: PAN	000-255
Ch11: PAN FINE	000-255
Ch12: TILT	000-255
Ch13: TILT FINE	000-255
Ch14: FUNCTION	Pan/Tilt speed (fast-slow)
	0-25: UNUSED RANGE
	26-76: EFFECT RESET
Ch15: RESET	77-127: PAN/TILT RESET
	128-255: COMPLETE RESET
	0-25: UNUSED RANGE
Ch16: LAMP CONTROL (with Option: Lamp Dmx ON)	26-100: LAMP OFF (WAIT 5 SECOND)
	101-255: LAMP ON (WAIT 5 SECOND)