


VIII Menu Function

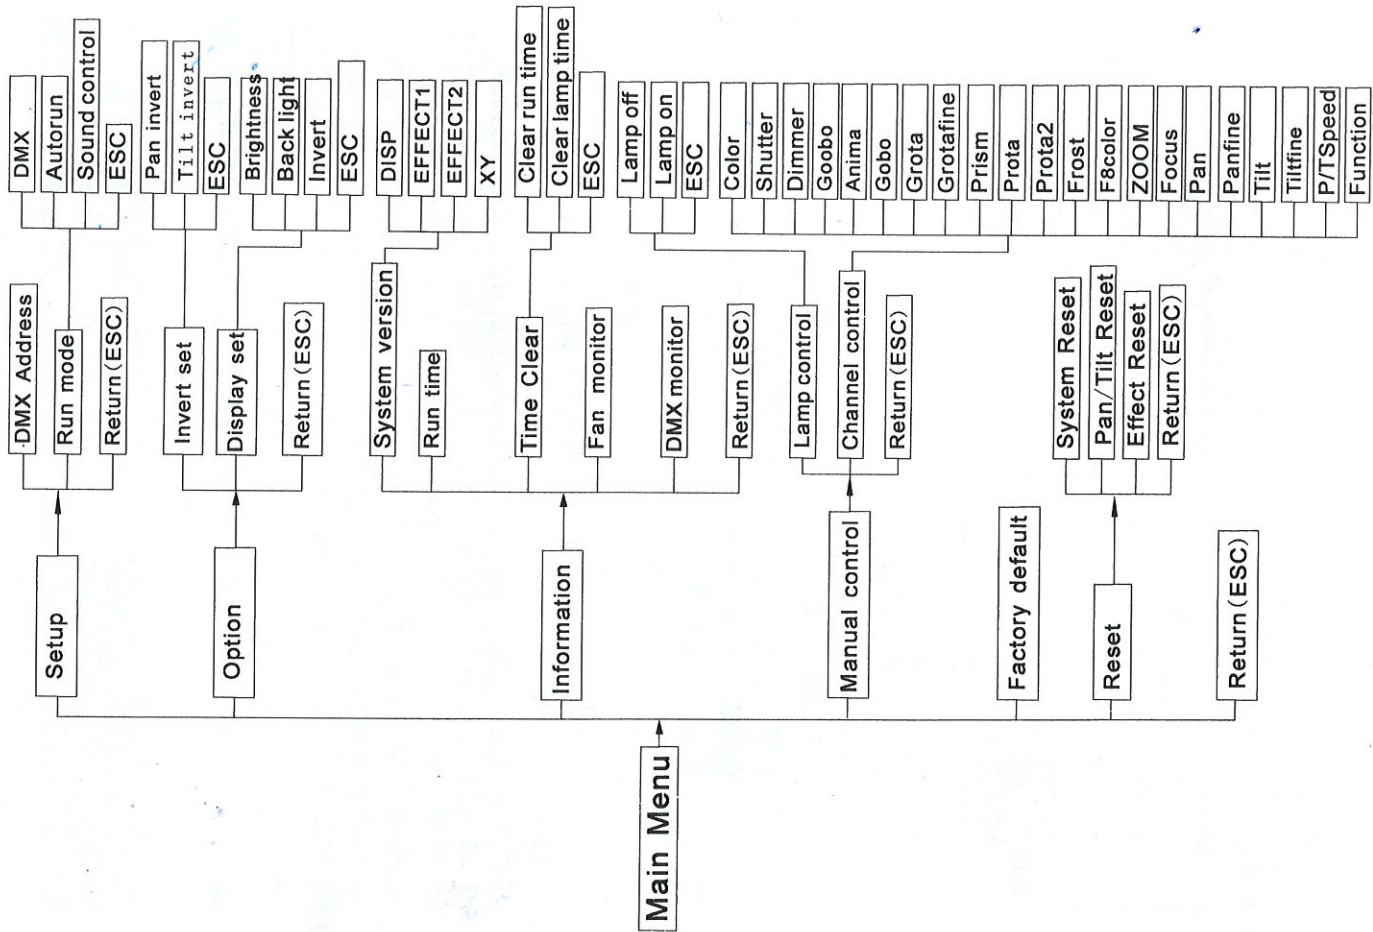

IX Channels Control

CHANNEL	FUNCTION	CHANNEL VALUE AND FUNCTION
1	COLOR WHEEL	0-5no act, 6-10color1+white, 10-15color1, 16-21color1+color2, 22-26color2, 27-31color2+color3, 32-37color3, 38-42color3+color4, 43-47color4, 48-53color4+color5, 54-58color5, 59-63color5+color6, 64-69color6, 70-74color6+color7, 75-79color7, 80-85color7+color8, 86-90color8, 91-95color8+color9, 96-101color9, 102-106color9+color10, 107-111color10, 112-117color10+color11, 118-122color11, 123-127color11+white, 128-191color change anticlockwise from fast to slow, 192-194no act, 195-255color change clockwise from slow to fast
2	STROBE	0-3close, 4-7open light, 8-97 strobe from slow to fast, 98-101open light, 102-126 strobe pulsation from slow to fast, 127-151strobe pulsation from slow to fast, 152-155open light, 156-180strobe pulsation from slow to fast, 181-205strobe pulsation from slow to fast, 206-209open light, 210-250 strobe random from slow to fast, 251-255open light
3	DIMMER	0-255
4	STATIC GOBO wheel	0-4no act, 5-9gobo, 10-14gobo2, 15-19gobo3, 20-24gobo4, 25-29gobo5, 30-34gobo6, 35-39gobo7, 40-44gobo8, 45-49gobo9, 50-54gobo10, 55-59gobo11, 60-64gobo12, 65-69gobo13, 70-74gobo wheel rotate anticlockwise from fast to slow, 115-159gobo wheel rotate clockwise from slow to fast, (gobo shake from slow to fast: 160-167gobo, 168-174gobo2, 175-182gobo3, 183-189gobo4, 190-196gobo5, 197-204gobo6, 205-211gobo7, 212-219gobo8, 220-226gobo9, 227-233gobo10, 234-241gobo11, 242-248gobo12, 249-255gobo13)
5	DYNAMIC GOBO wheel	0-7no act, 8-15big white, 16-23gobo1, 24-109gobo2 (dynamic gobo), 110-117gobo3, 118-126gobo4, 126-151 big white light shake from slow to fast, 152-177gobo1 shake from slow to fast, 178-203gobo2 (dynamic gobo) get around back and forth from slow to fast, 204-229gobo3 shake from slow to fast, 230-255gobo4 shake from slow to fast
6	ROTATING GOBO wheel	0-7no act, 8-15gobo1, 16-23gobo2, 24-31gobo3, 32-39gobo4, 40-47gobo5, 48-55gobo6, 56-63gobo7, 64-110gobo wheel rotate anticlockwise from fast to slow, 111-157gobo wheel rotate clockwise from slow to fast, (gobo shake from slow to fast: 158-171gobo1, 172-185gobo2, 186-199gobo3, 200-213gobo4, 214-227gobo5, 228-241gobo6, 242-255gobo7)
7	GOBO ROTATE	0-63gobo rotate index, 64-127gobo rotate anticlockwise from fast to slow, 128-191gobo rotate clockwise from slow to fast, 192-255gobo swing back and forth
8	GOBO ROTATE FINE	0-255
9	PRISM	0-63no act, 64-127prism insert, 128-191prism2 insert, 192-255prism superpose
10	PRISM MACRO	0-15no act, 16-65prism swing back and forth from fast to slow, 66-99prism2swing back and forth from fast to slow, 100-135prism and prism2swing back and forth from fast to slow, 136-174prism insert and prism2swing back and forth from slow to fast, 175-215prism2 insert and prism2swing back and forth from fast to slow, 216-255prism and prism2 swing Alternately back and forth from fast to slow.
11	PRISM 1 ROTATE	0-63prism rotate index, 64-126 rotate anticlockwise from fast to slow, 127-128 rotate stop, 129-191 rotate clockwise from slow to fast, 192-207 rotate back and forth from slow to fast, 208-223 rotate back and forth from slow to fast, 224-239 rotate back and forth from slow to fast, 240-255 rotate back and forth from slow to fast.
12	PRISM 2 ROTATE	0-63prism rotate index, 64-126 rotate anticlockwise from slow to fast, 127-128 rotate stop, 129-191 rotate clockwise from slow to fast, 192-207 rotate back and forth from slow to fast, 208-223 rotate back and forth from slow to fast, 224-239 rotate back and forth from slow to fast, 240-255 rotate back and forth from slow to fast.
13	FROST	0-3no act, 4-255 frost insert.
14	Colorful color	0-240no act, 241-255 Colorful color insert.
15	FOCUS	0-255
16	ZOOM	0-255
17	PAN	0-255
18	PAN FINE	0-255
19	TILT	0-255
20	TILT FINE	0-255
21	PAN/TILT SPEED	0-255
22	RESET AND LAMP CONTROL	0-99no act, 100-109pan/tilt reset, 110-119effect reset, 120-129all function reset, 130-159no act, 160-191 lamp off (wait 5 seconds), 192-223no act, 224-255 lamp (wait 5 seconds)