
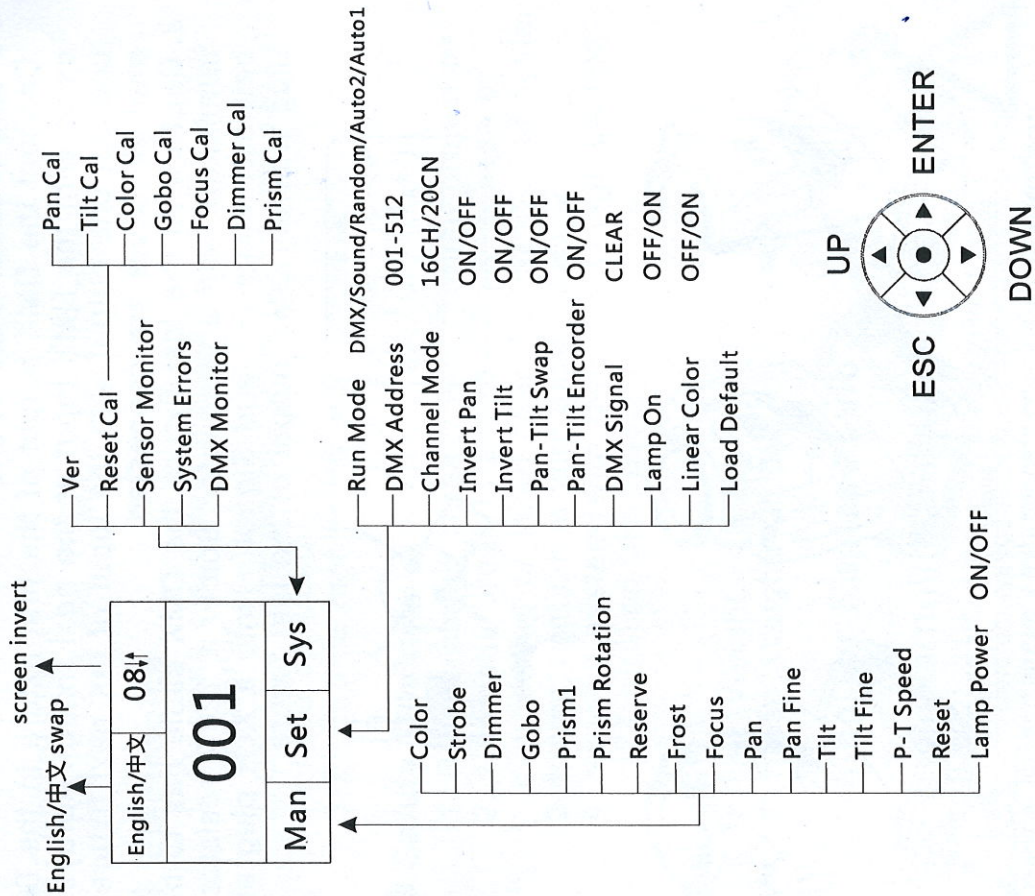


VIII Menu Function

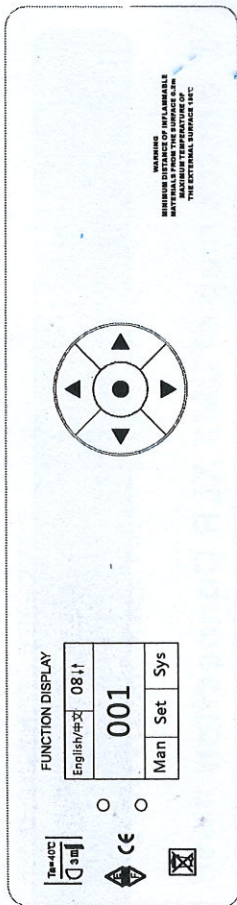

IX Channels Control

CH	Channel Mode	
	16	20
1	Color	Color
2	Strobe	Strobe
3	Dimmer	Dimmer
4	Gobo	Gobo
5	Prism	Prism
6	Prism Rotate	Prism Rotate
7	empty	empty
8	Frost	Frost
9	Focus	Focus
10	Pan	Pan
11	Pan Fine	Pan Fine
12	Tilt	Tilt
13	Y Tilt Fine	Y Tilt Fine
14	Pan-Tilt Speed	Pan-Tilt Speed
15	Reset 0-25 no act 26-76 head motor reset (wait 5 second) 77-127 pan and tilt reset (wait 5 second) 128-255 all motor reset (wait 5 second)	Reset 0-25 no act 26-76 head motor reset (wait 5 second) 77-127 pan and tilt reset (wait 5 second) 128-255 all motor reset (wait 5 second)
16	Lamp control 0-9 no act 10-100 lamp off (wait 5 second) 101-255 lamp on (wait 5 second)	Lamp control 0-9 no act 10-100 lamp off (wait 5 second) 101-255 lamp on (wait 5 second)
17	无	Pan-Tilt Speed
18	无	Color Wheel Speed
19	无	Dimmer-prism-frost Speed