

Function Instruction:

Rddr	1 - 512	DMX address set
Chnd	9 ch 11 ch	CH mode
shnd	Show 1 - Show 4	Show mode
dInd	Stda(Standard) StGE(Stage) tv(TV) ArAL(Architectural) tHAL(Theatrical)	Dimmer mode
SLnd	Slave 1 Slave 2	Slave mode
SoUn	On - Off	Sound control
Sens	000 - 100	Adjust the sensitivity of sound
plnt	Yes - No	Pan
tInt	Yes - No	Tilt
Led	On - Off	backlight
disp	disp - dsip	Display or reverse it
teSt	Test	autotest
temp	Temp	temperature display
rset	Reset	rest
MENU	oPRn---(0-255)	fine function: after entering the menu, long press the confirmation key for 5 seconds, to fine-tune Settings
	OtlL----(0-255)	
	oCob----(0-255)	
	OCoL---(0-255)	

DMX channel

Function	Value	Percent / Setting	Mode 9CH	Mode 11CH
Pan Running	000-255	0~100%	1	1
Pan Fine	000-255	0~100%	2	2
Tilt Running	000-255	0~100%	2	3

Tilt Fine	000-255	0~100%	4
Color	000-007	Color 1	3 5
	008-014	Color 2	
	015-021	Color 3	
	022-028	Color 4	
	029-035	Color 5	
	036-042	Color 6	
	043-049	Color 7	
	050-056	Color 8	
	057-127	Half color	
	128-189	Color plate rotation from fast to slow	
	190-193	stop	
	194-255	Color plate rotation from slow to fast	
	000-007	Gobo 1	
	008-015	Gobo 2	
	016-023	Gobo 3	
	024-031	Gobe 4	
Gobo	032-039	Gobo 5	4 6
	040-047	Gobo 6	
	048-055	Gobo 7	
	056-063	Gobo 8	
	064-071	Gobo1 dither	
	072-079	Gobo2 dither	
	080-087	Gobo3 dither	
	088-095	Gobo4 dither	
	096-103	Gobo5 dither	
	104-111	Gobo6 dither	
	112-119	Gobo7 dither	
	120-127	Gobo8 dither	
	128-189	Change the pattern automatically, from fast to slow stop	
	190-193	Change the pattern automatically, from slow to fast	
	194-255	close open strobe from slow to fast	
strobe	000-007	close	5 7
	008-015	open	
	016-131	strobe from slow to fast	