


### 8 CAHNNEL

CHANNEL	FUNCTION LIST	
1	GENERAL DIMMER	0 ————— 255
2	SPEED OF STROBE	0 ————— 255
3	FUNCTION	0-50: DMX 9CAHNNEL 50-100 TRANSITION 101-150 COLOR CHANG 151-200 RUNNIG 201-255 SOUND
4	SPEED	SPEED OF COMBINATION EFFECT
5	RED DIMMER	0 ————— 255
6	GREEN DIMMER	0 ————— 255
7	BLUE DIMMER	0 ————— 255
8	WHITE DIMMER	0 ————— 255

### 4 CAHNNEL

CHANNEL	FUNCTION LIST	
1	RED	0 ————— 255
2	GREEN	0 ————— 255
3	BLUE	0 ————— 255
4	WHITE	0 ————— 255

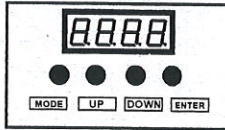

A.001		A512	DMX ADDRESS SETTING 8CAHNNEL
d.001		d512	DMX ADDRESS SETTING 4CAHNNEL
CC01		CC99	SPEED OF TRANSITION
CP01		CP99	SPEED OF COLOR CHANG
dE01		dE99	SPEED OF RUNNIG
dEdF		dEdF	Sound
-on-		-off	DISPLAY
r.001		r.255	RED DIMMER
g.001		g.255	GREEN DIMMER
b.001		b.255	BLUE DIMMER
w.001		w.255	WHITE DIMMER